

Display Case Operating Instructions

To open the display case, carefully slide the left door to the right or the right door to the left

Display Case Cleaning & Care Instructions

As required, both the glass panels, as well as the vinyl wrapped interior of your Educational Equipment Display Case may be wiped down with a non-abrasive cleaning solution using a dust-free cotton cloth or towel.
(Windex is recommended)

The use of paper towels is not recommended, as they may shred on the vinyl's rough surface, leaving behind pieces of paper towel, and create dust.