

***EQUIPMENT REQUIRED:***

**Power Drill & Bits**  
**Tape Measure**

**Level**  
**Box Knife**

**Mounting Hardware:**  
**#10 or #12 anchors & screws**


Verify sizes and quantity of units delivered prior to installation. Contact Educational Equipment with any discrepancies at 330-673-4881.

Wall anchors & screw are NOT typically provided. It is the responsibility of the installer to furnish the required fasteners for each wall type.




1. Plan to install Snap-on Clips every 16-24" apart. Mark on the wall where the clips will be installed while using a level (laser if available). Install anchors & screws on center of the clip slot (in case vertical adjustments are necessary). Be sure that the curved part is at the bottom & angled at the top. (see picture to the left)
2. Once all clips are installed. Snap on the map rail by hooking it over the angled top of the clips & pushing them over the bottom curved part of the clips.

3. Insert the Forbo Cork strip into the extrusion & push until the cork overhangs both ends.

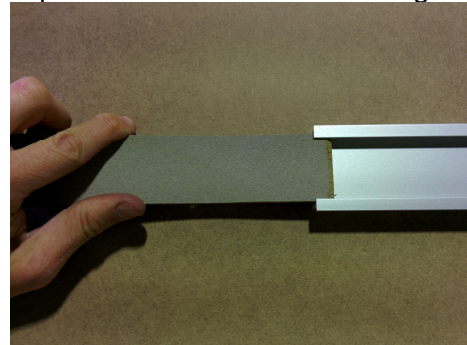

4. Cut off the excess cork with a box knife flush to the end. Be careful as to not damage the wall.

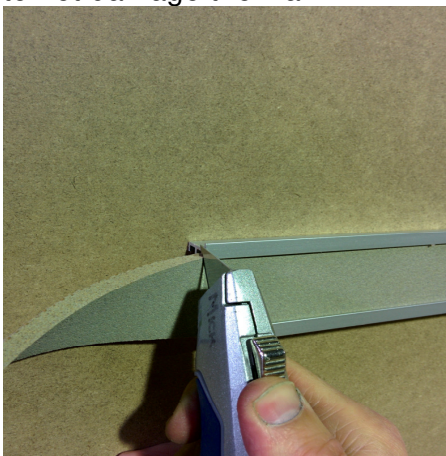

5. Slide on any accessories. Install End Caps with provided screw. Installation complete.

